


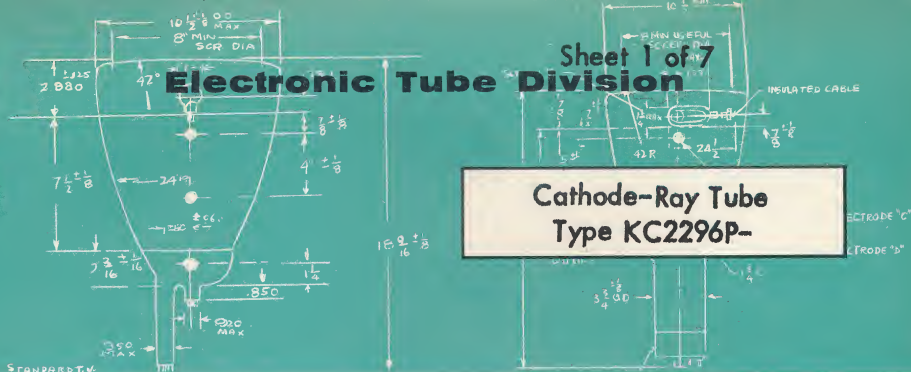

Cathode-Ray Tube
Type KC2296P-TENTATIVEGENERAL CHARACTERISTICS (Mechanical Data) (Continued)Collar, 22-Pin
Base, 25-Pin
BasingSpecial
B25-139

Collar and Base Alignment:

Collar Pin No. 1 and base key each aligns with the D3D4 trace of guns "B" and "C"	± 10	Degrees
Collar Pin No. 1 and base key each aligns with the D1D2 trace of guns "A", "D" and "E"	± 10	Degrees
Collar Pin No. 1 and base key each aligns with the bulb sidewall	± 5	Degrees
Collar Pin No. 1 aligns with base key within	3	Degrees

Positive voltage on D3 of guns "B" and "C" deflects the beam toward Pin No. 1 of the ring base
 Positive voltage on D1 of guns "B" and "C" deflects the beam approximately toward Pin No. 6 of the ring base

Positive voltage on D3 of guns "A", "D" and "E" deflects the beam approximately toward Pin No. 6 of the ring base

Positive voltage on D1 of guns "A", "D" and "E" deflects the beam toward Pin No. 12 of the ring base

Bulb Contact Alignment:

Bulb cap aligns with D3D4 trace of guns "B" and "C"	± 10	Degrees
Bulb cap diametrically opposite base key and Collar Pin No. 1		
Bulb cap located on tube center line	$\pm 1/4$	Inch
Bulb wall aligns with D1D2 trace of guns "A", "D" and "E"	± 5	Degrees
Bulb wall aligns with D3D4 trace of guns "B" and "C"	± 5	Degrees

Trace Alignment:

D1D2 trace aligns with D3D4 trace	90 ± 2	Degrees
Corresponding traces align within ³	2	Degrees

MAXIMUM RATINGS (Design Center Values)

Heater Voltage	6.3	Volts
Heater Current at 6.3 Volts (for each unit)	$0.6 \pm 10\%$	Ampere

DE-6892

Cathode-Ray Tube
Type KC2296P-TENTATIVEMAXIMUM RATINGS (Design Center Values) (Continued)

Post Accelerator Voltage	7000	Max. Volts DC
Accelerator Voltage	3500	Max. Volts DC
Accelerator Input	6	Max. Watts
Ratio Post Accelerator Voltage to Accelerator Voltage ⁴	2.0	Max.
Focusing Voltage	1500	Max. Volts DC
Grid No. 1 Voltage		
Negative Bias Value	200	Max. Volts DC
Positive Bias Value	0	Max. Volts DC
Positive Peak Value	0	Max. Volts
Peak Heater-Cathode Voltage		
Heater negative with respect to cathode	180	Max. Volts
Heater positive with respect to cathode	180	Max. Volts
Peak Voltage between Accelerator and any Deflection Electrode	500	Volts

TYPICAL OPERATING CONDITIONS

Post Accelerator Voltage	4000	Volts DC
Accelerator Voltage	2000	Volts DC
Focusing Voltage	450 to 650	Volts DC
Grid No. 1 Voltage ⁵	-30 to -50	Volts DC
Modulation ⁶	45	Max. Volts DC
Line Width "A" ⁷	.025	Max. Inch
Deflection Factors:		
D1D2 - guns "B" and "C"	65 to 85	Volts DC/Inch
D1D2 - guns "A", "D" and "E"	60 to 80	Volts DC/Inch
D3D4 - guns "B" and "C"	30 to 40	Volts DC/Inch
D3D4 - guns "A", "D" and "E"	35 to 45	Volts DC/Inch
Deflection Factor Uniformity ⁸	2%	Max.
Useful Scan ⁹		
D1D2 - guns "B" and "C"; D3D4 - guns "A", "D" and "E"	4.5	Min. Inches
D3D4 - guns "B" and "C"; D1D2 - guns "A", "D" and "E"	1.5	Min. Inches
Interaction Factor ¹⁰	.00001	Max. Inch/Volt

DE-6892

Cathode-Ray Tube
Type KC2296P-TENTATIVECIRCUIT DESIGN VALUES

Grid No. 1 Circuit Resistance	1.5	Max. Megohms
Resistance in any Deflecting-Electrode Circuit ¹¹	1.0	Max. Megohms


NOTES

1. Values are for each unit unless otherwise stated.
2. Following the bulb contour (except for corners).
3. Corresponding traces are those traces which deflect in the same trace direction.
4. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
5. Visual extinction of the undeflected, focused spot.
6. The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 50 μ ADC.
7. Measured in accordance with MIL-E-1 specifications, using an Ib3 of 25 μ ADC.
8. Measured in accordance with MIL-E-1 specifications.
9. Centered about normal undeflected spot position.
10. The deflection of one beam when balanced DC voltages are applied to the deflection electrodes of the other will not be greater than the indicated value.
11. It is recommended that the deflecting-electrode circuit resistances be approximately equal. Higher resistance values up to five megohms may be used for low beam current operation.

TENTATIVE


CATHODE-RAY TUBE

KC 2296P-

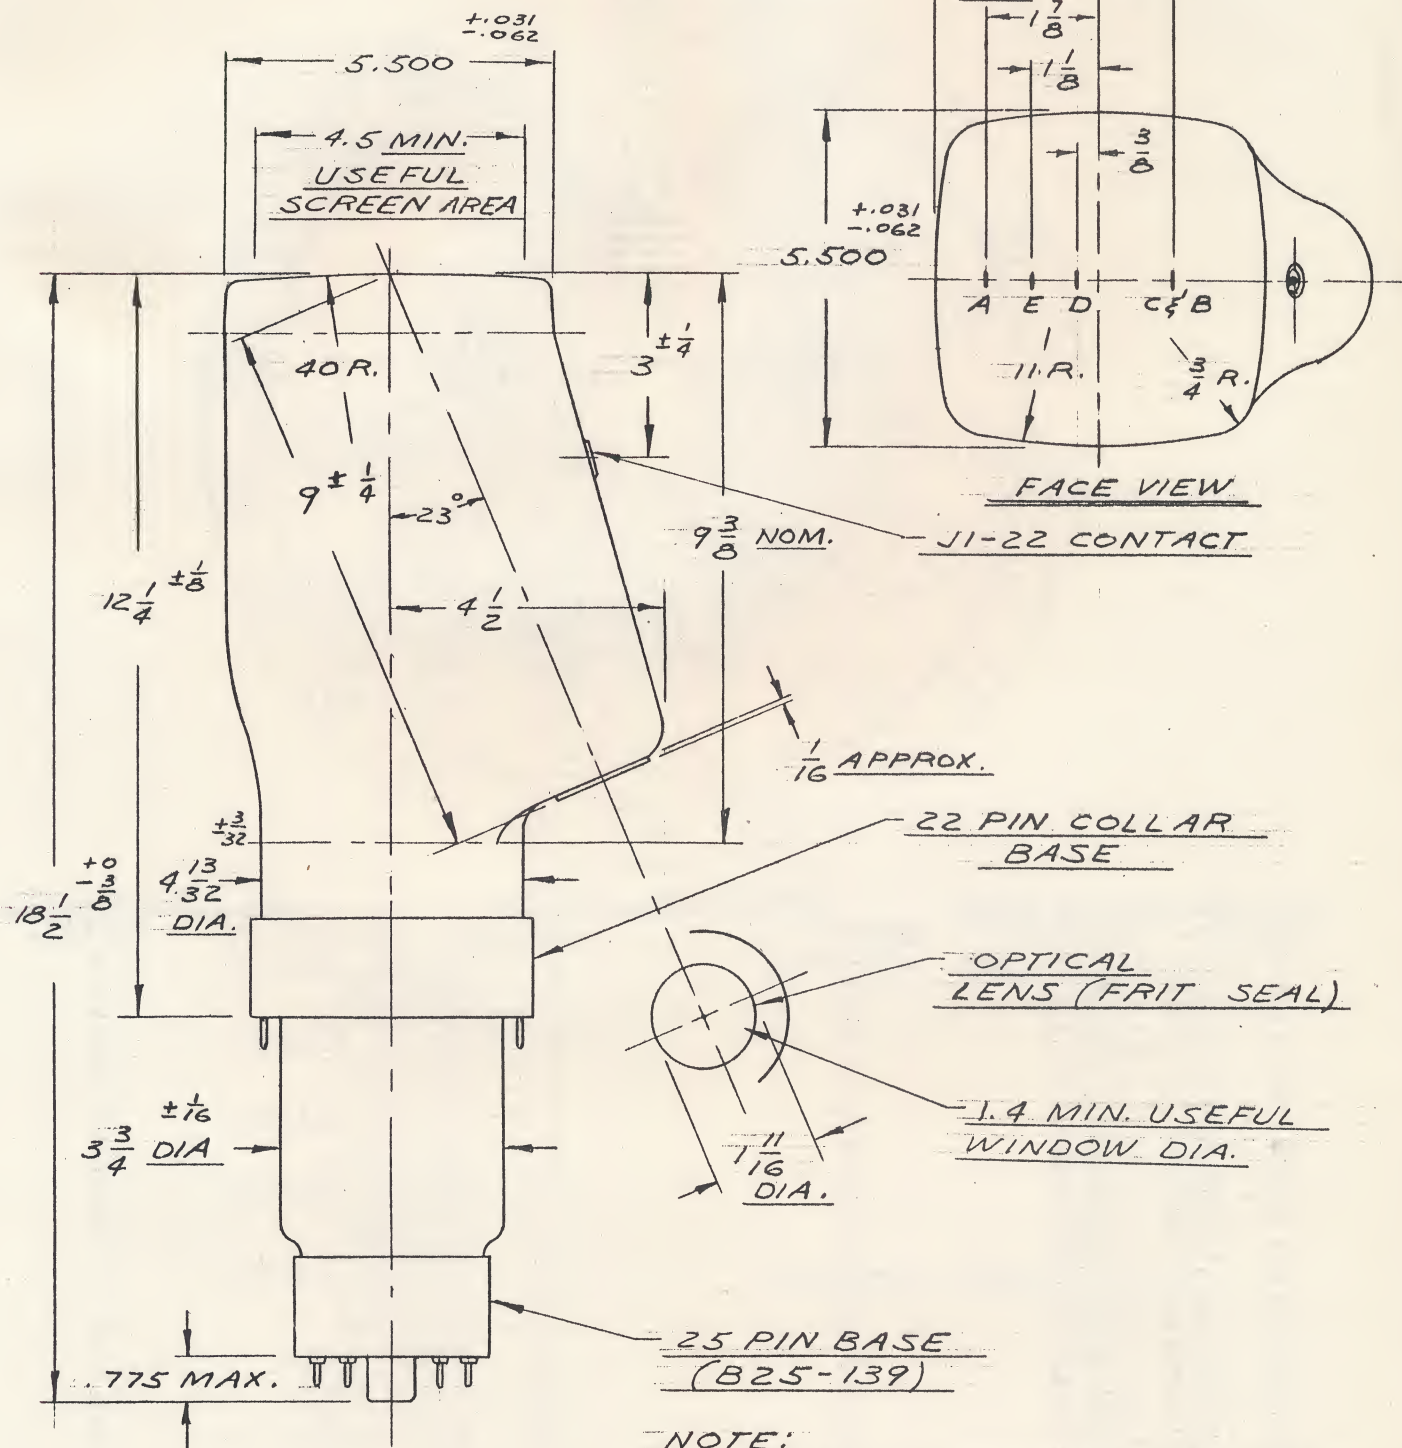

NOTE:
BEAMS CENTER ON POSITIONS
INDICATED WITHIN $\frac{5}{16}$ R. CIRCLE

DE-6892-3
6-27-63

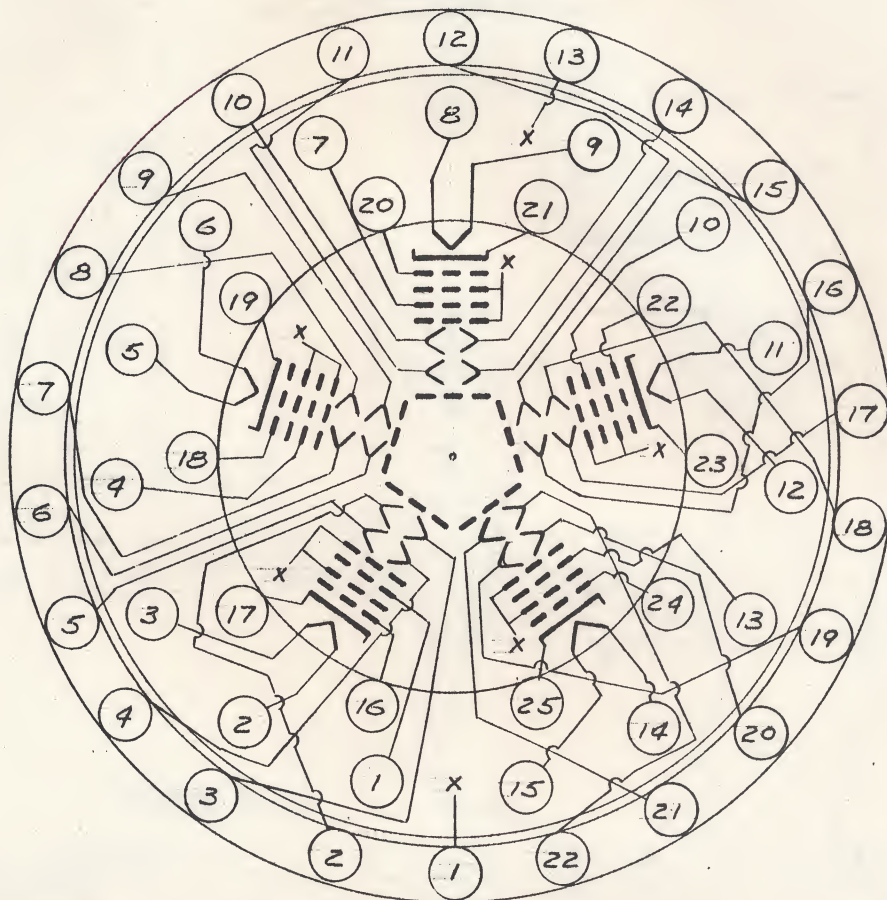TENTATIVEBASINGKC 2296P-22 PIN COLLAR BASE

<u>PIN NO.</u>	<u>ELEMENT</u>	<u>BEAM</u>
1	ACCELERATOR	COMMON
2	D.P. NO. 2	A
3	D.P. NO. 1	A
4	D.P. NO. 3	A
5	D.P. NO. 4	A
6	D.P. NO. 1	B
7	D.P. NO. 3	B
8	D.P. NO. 4	B
9	D.P. NO. 2	B
10	D.P. NO. 3	C
11	D.P. NO. 1	C
12	D.P. NO. 2	C
13	ACCELERATOR	COMMON
14	D.P. NO. 4	C
15	D.P. NO. 1	D
16	D.P. NO. 2	D
17	D.P. NO. 4	D
18	D.P. NO. 3	D
19	D.P. NO. 4	E
20	D.P. NO. 3	E
21	D.P. NO. 2	E
22	D.P. NO. 1	E

BOTTOM VIEW25 PIN BASE



<u>PIN NO.</u>	<u>ELEMENT</u>	<u>BEAM</u>
1	FOCUS. ELECT.	A
2	HEATER	A
3	HEATER	A
4	FOCUS. ELECT.	B
5	HEATER	B
6	HEATER	B
7	FOCUS. ELECT.	C
8	HEATER	C
9	HEATER	C
10	FOCUS. ELECT.	D
11	HEATER	D
12	HEATER	D
13	FOCUS. ELECT.	E
14	HEATER	E
15	HEATER	E
16	GRID NO. 1	A
17	CATHODE	A
18	GRID NO. 1	B
19	CATHODE	B
20	GRID NO. 1	C
21	CATHODE	C
22	GRID NO. 1	D
23	CATHODE	D
24	GRID NO. 1	E
25	CATHODE	E

DE-68924-9-63

TENTATIVE

CATHODE-RAY TUBE

KC2296P-

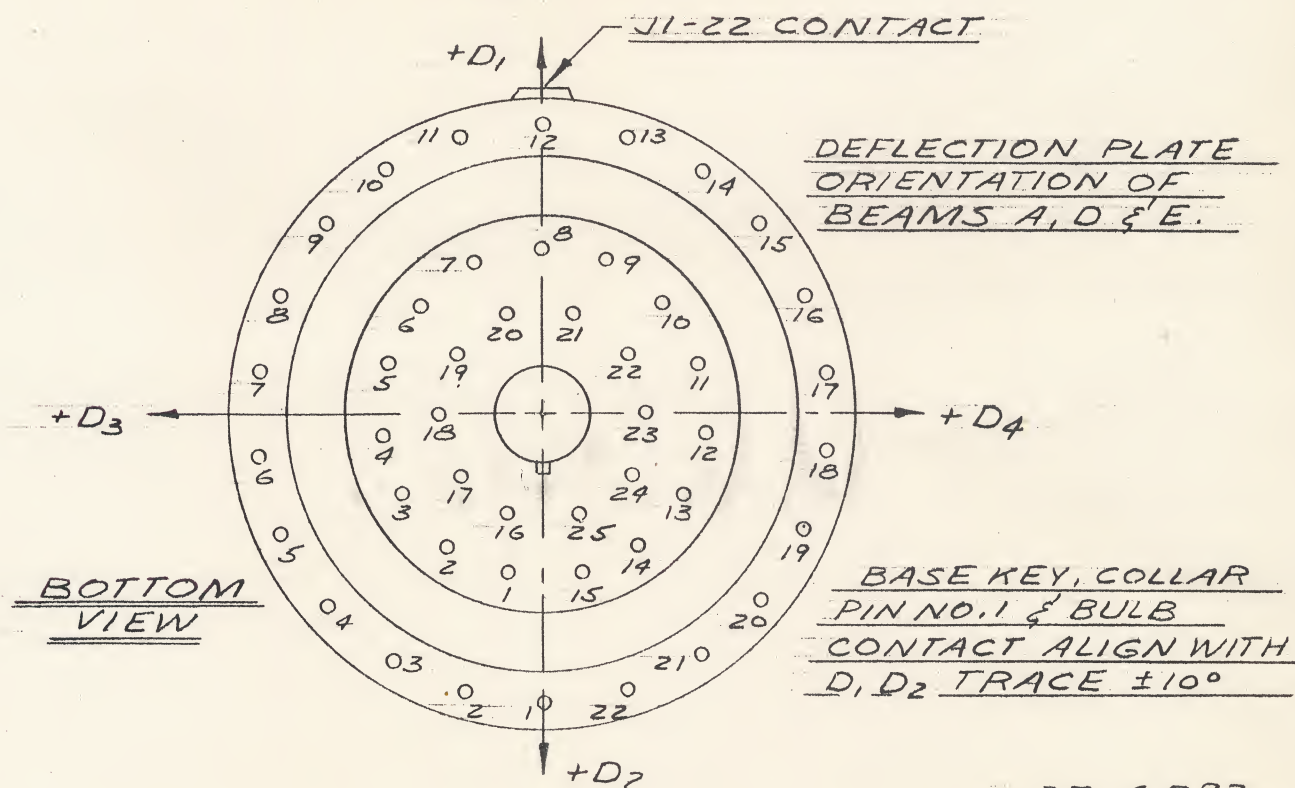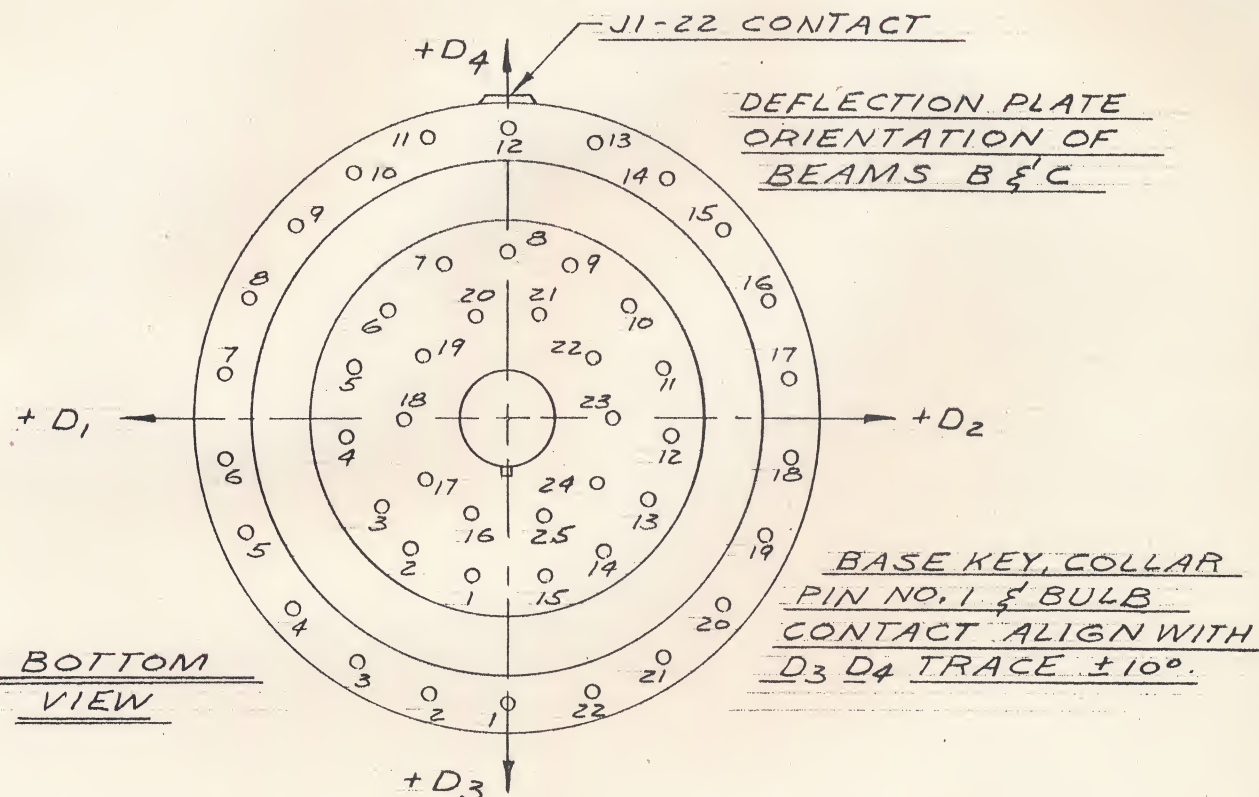

DE-6892
4-9-63

FAIRCHILD**DU MONT LABORATORIES**DIVISIONS OF FAIRCHILD CAMERA
AND INSTRUMENT CORPORATION**DU MONT LABORATORIES**

Divisions of Fairchild Camera and Instrument Corporation

DATE

December, 1964

SOURCE OF INQUIRY

Data Sys. Des.

ELECTRONIC TUBE SALES

Dear Mr. Nelson:

We appreciate this opportunity to send you the literature you recently requested concerning Du Mont products. If your particular interest or application requires additional information, please indicate below and mail this Post Paid card to us. Your inquiry will receive our prompt attention.

NAME & ADDRESS CORRECT?

Mr. T. Nelson, Ind. Cons.
Box 1546
Poughkeepsie, N. Y.

PRODUCT - TYPE

KC2296

☐ I would like to have your representative call.☐ Please send detailed information on _____

Please add my name to your mailing list for:

☐ Cathode-Ray Tubes☐ Photosensitive Devices☐ Storage Tubes☐ Power Tubes☐ Ionization Gauges

Postage
Will be Paid
by
Addressee

No
Postage Stamp
Necessary
If Mailed in the
United States

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 223, CLIFTON, NEW JERSEY

DU MONT LABORATORIES
Divisions of FAIRCHILD CAMERA AND INSTRUMENT CORP.

750 BLOOMFIELD AVENUE

CLIFTON, NEW JERSEY 07015, U. S. A.

ATT: ELECTRONIC TUBE SALES DEPARTMENT

